



Steel colour when supplied and installed



The CORTEN material will weather within a few weeks after installing providing a rustic look as above.




Installation method for EDGESCAPE

EDGESCAPE lawn edging has many applications and installation may differ for each of these due to the soil conditions and local requirements. Our guidelines below should be followed as closely as possible to ensure EDGESCAPE is installed both safely and aesthetically.

1. Prepare the lawn edge using a tensioned rope line for a straight edge. For a curved edge use a method that creates a smooth curve. Remove any obstructions such as stones or roots that would hinder the edging being installed. A lawn edging tool or spade can be used to define this edge which must be vertical.




2. The smoother edge should face outwards for the best aesthetic look with the bent top on the inside (grass side).

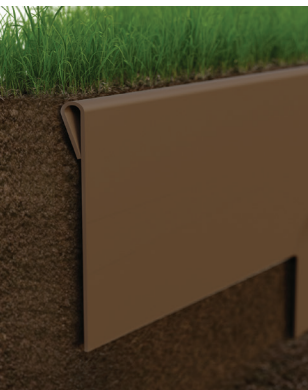

3. Push one end of a section of the EDGESCAPE edging into the ground at the required height, leaving the other end clear to be able to link the next section. Starting at one end, using a wooden block and mallet, tap the edging into the ground. Move along the edging to ensure a level installation. Ensure the edging is knocked in vertically.



4. Use the supplied steel plate and 4 screws to connect the EDGESCAPE to the next piece (Do this before knocking fully into the ground). Insert the plate under the gap left by the bent top slot on the rear edge of the EDGESCAPE and align the holes.

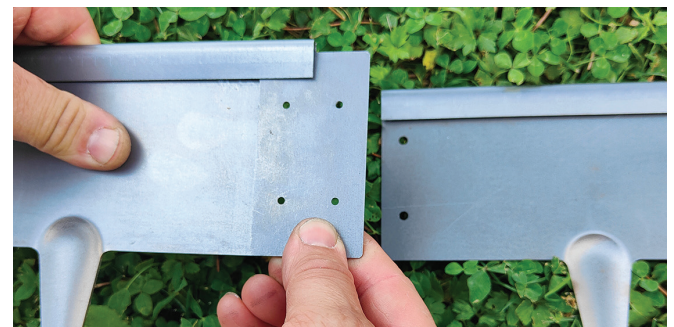



5. Fasten the plate to the EDGESCAPE by screwing two of the four screws with a screwdriver (screw on the side of the EDGESCAPE, not the plate). Connect the next EDGESCAPE by sliding the plate inside the slot.



6. Screw in the two remain screws from the front face (not the steel place side).



7. The smooth bevelled top of EDGESCAPE should be level with where the soil and grass meet (flush with the soil). This will ensure that a lawn mower doesn't come into contact with EDGESCAPE.



8. For corners and curves, use a block of wood or another solid item to form the shape required. The edging can easily be bent by hand. We suggest all corners should be bent, rather than two lengths joined.



9. EDGESCAPE can be cut using a hacksaw if the last length is too long for your requirements. It is important to use a file to smooth any cut.



10. Installed edging will weather and the surface only will rust within a few weeks.



This installation guide is a basic set of guidelines. With any work please ensure that safety is considered including the wearing of gloves and eye protection.