



Installation method for EDGESCAPE

EDGESCAPE lawn edging has many applications and installation may differ for each of these due to the soil conditions and local requirements. Our guidelines below should be followed as closely as possible to ensure EDGESCAPE is installed both safely and aesthetically.



1. Prepare the lawn edge using a tensioned rope line for a straight edge. For a curved edge use a method that creates a smooth curve. Remove any obstructions such as stones or roots that would hinder the edging being installed. A lawn edging tool or spade can be used to define this edge which must be vertical.



2. The smoother edge should face outwards for the best aesthetic look with the bent top on the inside (grass side).




3. Push one end of a section of the EDGESCAPE edging into the ground at the required height, leaving the other end clear to be able to link the next section. Starting at one end, using a wooden block and mallet, tap the edging into the ground. Move along the edging to ensure a level installation. Ensure the edging is knocked in vertically.



4. Link the next length of EDGESCAPE by sliding them together. Insert the length of wire inside the bevel at the top of the edging (the hole in the bent top).



5. Use thin-nosed pliers or a screwdriver to bend the metal tabs through the cut holes and back on themselves. Do this on both sides of the edging (each connection should have 4 metal tabs bent and secured).

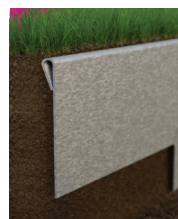

6. The smooth bevelled top of EDGESCAPE should be level with where the soil and grass meet (flush with the soil). This will ensure that a lawn mower doesn't come into contact with EDGESCAPE.



7. For corners and curves, use a block of wood or another solid item to form the shape required. The edging can easily be bent by hand. We suggest all corners should be bent, rather than two lengths joined.



8. EDGESCAPE can be cut using a hacksaw if the last length is too long for your requirements. It is important to use a file to smooth any cut. To stop rusting it is advisable to prime and paint the cut edge.

This installation guide is a basic set of guidelines. With any work please ensure that safety is considered including the wearing of gloves and eye protection.